


# Using your Laundry Card

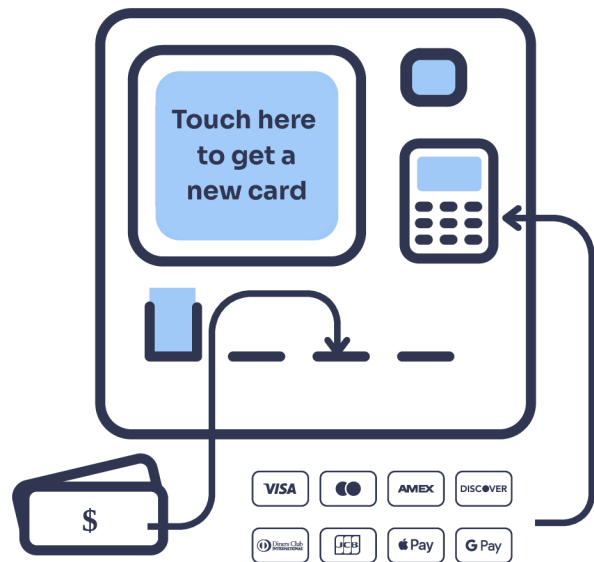

1

## Get a Laundry Card

*(If you already have a card, go to **Step 2**)*

The laundry card is used to start washers and dryers. The card is reusable and reloadable. No coins needed.

Touch the **"Touch here to get New Card"** on the kiosk. Then insert bills or select Credit/Debit.

The Value Add Center kiosk does not provide change. Your payment amount will be added to the balance on the laundry card.



2

## Add more money (if needed)

Simply place your card into the card holder and make payment with cash or credit/debit cards.



3

## Start washer or dryer

Place your card onto the card reader.

You may need to press the **Start** button on the machine.

# Using your Laundry Card



1

## Get a Laundry Card

*(If you already have a card, go to **Step 2**)*

The laundry card is used to start washers and dryers. The card is reusable and reloadable. No coins needed.

Touch the "**Touch here to get New Card**" on the kiosk. Then insert bills or select Credit/Debit.

The Value Add Center kiosk does not provide change. Your payment amount will be added to the balance on the laundry card.



2

## Add more money (if needed)

Simply place your card into the card holder and make payment with cash or credit/debit cards.



3

## Start washer or dryer

Place your card onto the card reader.

You may need to press the **Start** button on the machine.